



10 x Necklace-Set



1 x Magnet for reset



1 x Clip-Set



10x Wristband-Set



5 x 3V Battery CR2025


Accessories



Torx T4 screwdriver

Battery change

Only by authorized personnel!

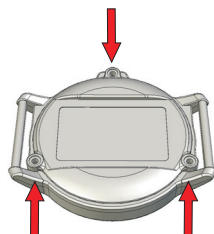

Cleaning the transmitter and the accessories



Not to be used: alcohol, alcohol or vinegar-based cleaning agents, vinegar, cleaning agents for glass or plastics, disinfectants (except Incidur®), methylated spirits, benzine, other aggressive agents, body lotion, sun cream, hand and nail cream. Do not wash.

Model: MIYS37L Wristband Transmitter
FCC ID.: W9N-MIYS37L


This equipment complies with Part 15 of the FCC rules. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept all interference received, including interference that may cause undesired operation.

MIYS37L Wristband Transmitter - Locator

Operating instructions

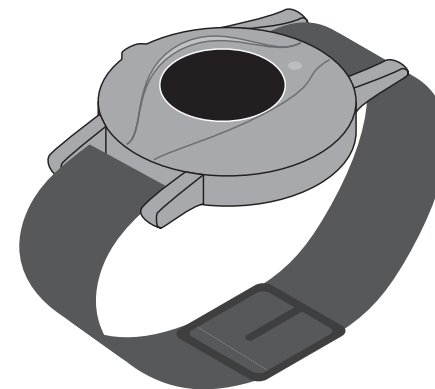

CRS-SB-424FIUS	MIYS37L Wristband Transmitter Locator
CRS-SB-426FIUS	MIYS37L Wristband Transmitter Locator, dementia alarm only




970.054 V1 2009.05

BOSCH

Trigger an emergency call



Detection at a beacon controller

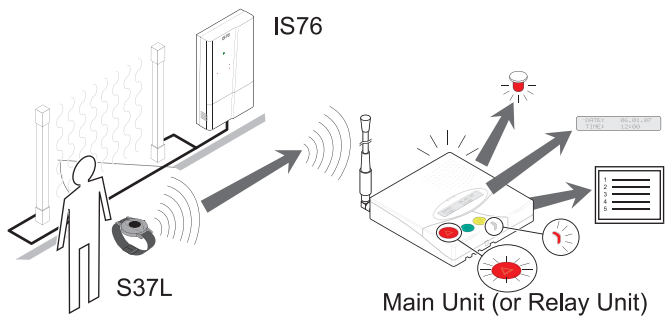


Safety notes




Repairs only by authorized service stations



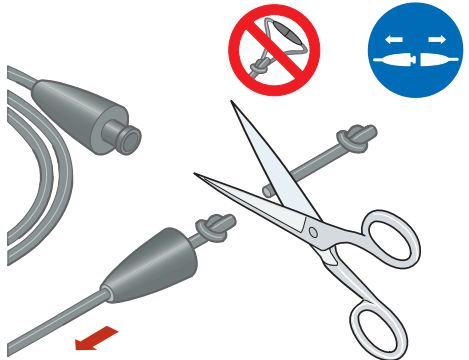

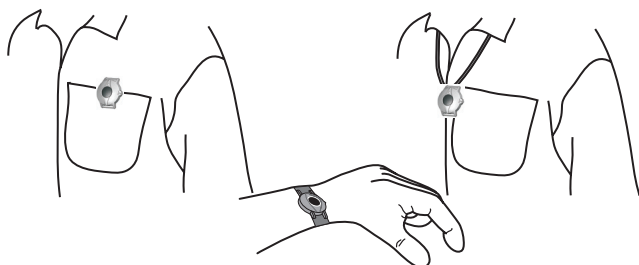


Shortening the cord



Changing the wearing method



Technical data

	Ø 42 mm x 13.5 mm 22 g
	1x CR2025 3V
	0°C ~ +55°C
	Frequency: 434.01 MHz Radiated power: 20 µW
	Minimum range in free field: 200 m
	Automatic radio link monitoring: daily check and at every alarm
	IP 67 Environment class II

